


JAGUAR

F-TYPE

Carbon Fibre Fender Louvres *FITTING INSTRUCTION*

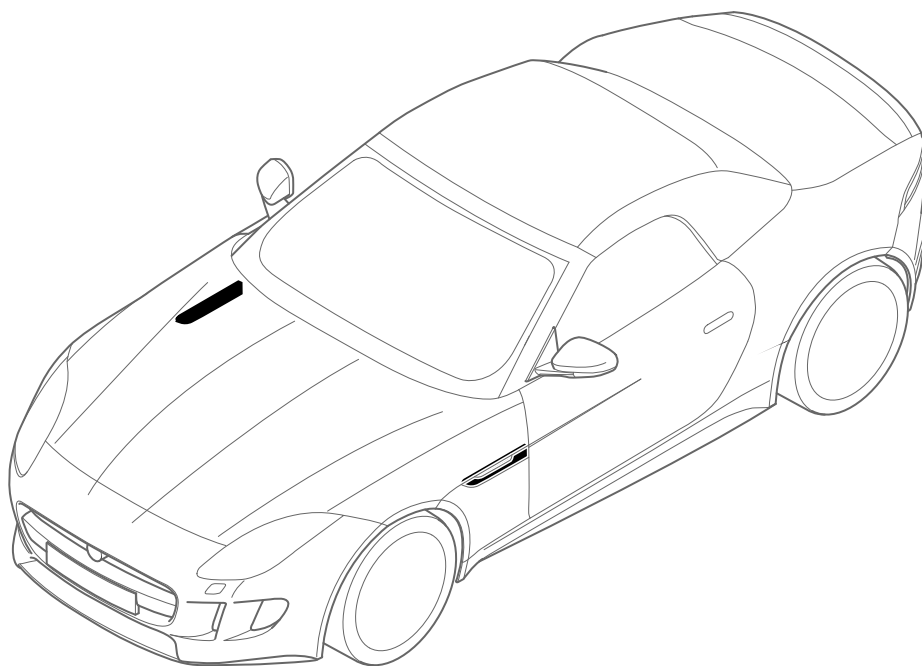

安装说明
碳纤维挡板百叶窗

EINBAUANLEITUNG
Carbonfaser-Kotflügelschlitz

INSTRUCTION DE MONTAGE
Aération d'aile en fibre de carbone

ISTRUZIONI PER L'USO
Presa di aerazione del parafrangente in fibra di carbonio

INSTRUCCION DE MONTAJE
Rejilla de la aleta de fibra de carbono




INSTRUÇÕES DE MONTAGEM
Alheta do guarda-lamas em fibra de carbono

Инструкции по установке
Решетка крыла на основе углеродного волокна

MONTAGEHANDLEIDING
Carbonvezel bumperrooster

取付用マニュアル
カーボン ファイバ フェンダ ルーバー

T2R5393 & T2R5394

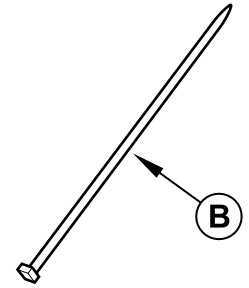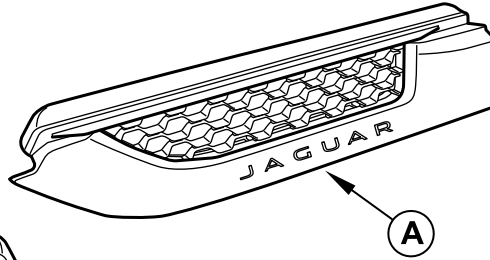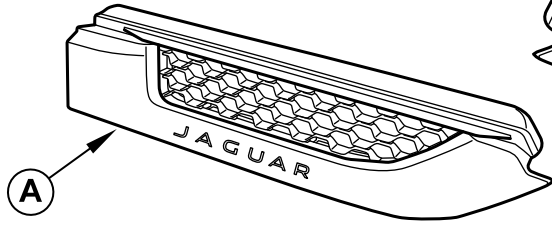

The following instructions are valid for both sides of the vehicle.

以下説明适用于车辆两侧。

Die folgenden Anweisungen gelten für beide Seiten des Fahrzeugs.

Les instructions suivantes sont valables pour les deux côtés du véhicule.

Le seguenti istruzioni sono valide per entrambi i lati del veicolo.

Las siguientes instrucciones son válidas para ambos lados del vehículo.


As instruções seguintes são válidas para ambos os lados do veículo.

Приведенные инструкции действительны для обеих сторон автомобиля.




De volgende instructies gelden voor beide zijden van het voertuig.

車両の両サイドに対して、以下の指示に従う。



1

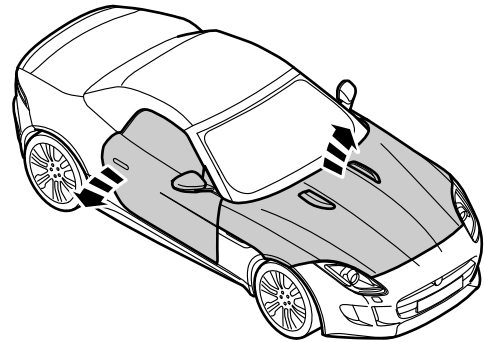

2

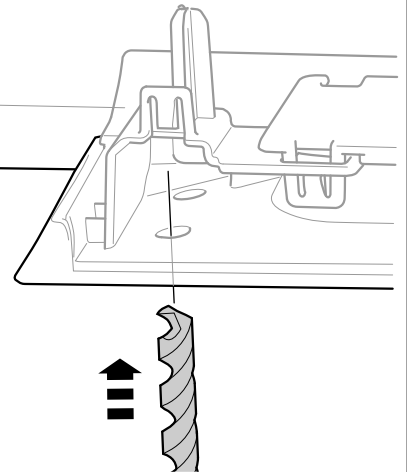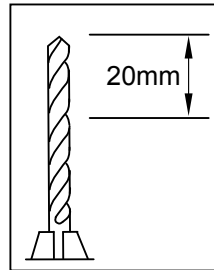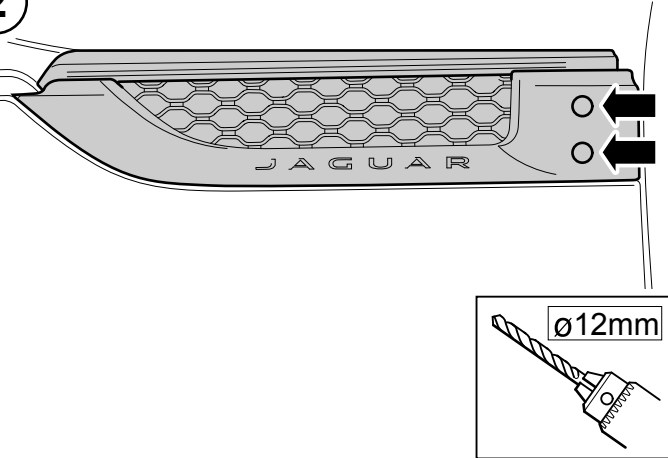

3

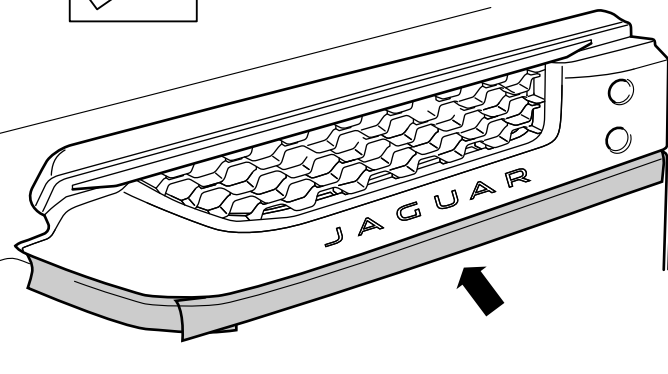

4

